

Steel Swing Stand

Congratulations on your purchase of the Steel Swing Stand.
We believe that you will find it a product of unsurpassed quality and durability.

SPECIAL NOTE:

 
These assembly instructions have been developed to make it as easy as possible for you to assemble the Steel Swing Stand by yourself. However, there are several points during assembly of this stand when you may find it helpful to have "an extra pair of hands" to help you.

Box should contain:

- (1) top elbow (part A)
- (2) 24" upper beams (part B)
- (2) main uprights (part C)
- (1) 60" lower beam (part D)
- (4) 36" legs (part E)
- (4) end caps (part F)
- (2) s-hooks (part G)


You also will need:

- A space at least 12 feet by 8 feet in which to assemble your stand
- A blanket or piece of carpet to protect the finish on the stand during assembly
- A helper (optional - see above)

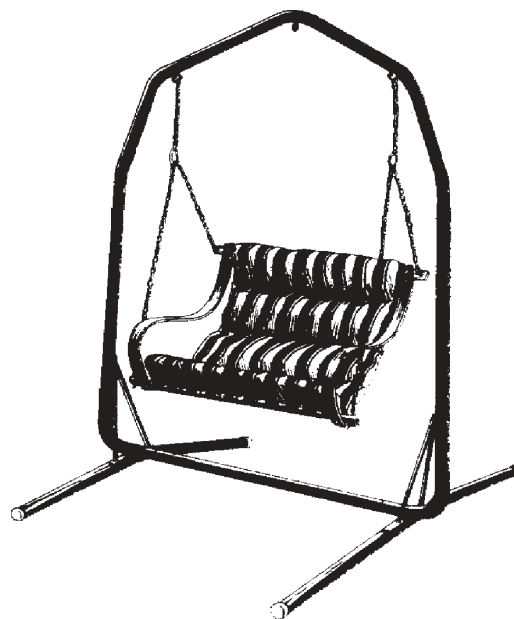

Steel Swing St and shown with Double Cushioned Swing (Swing is sold separately.)

 Assembly Instructions:

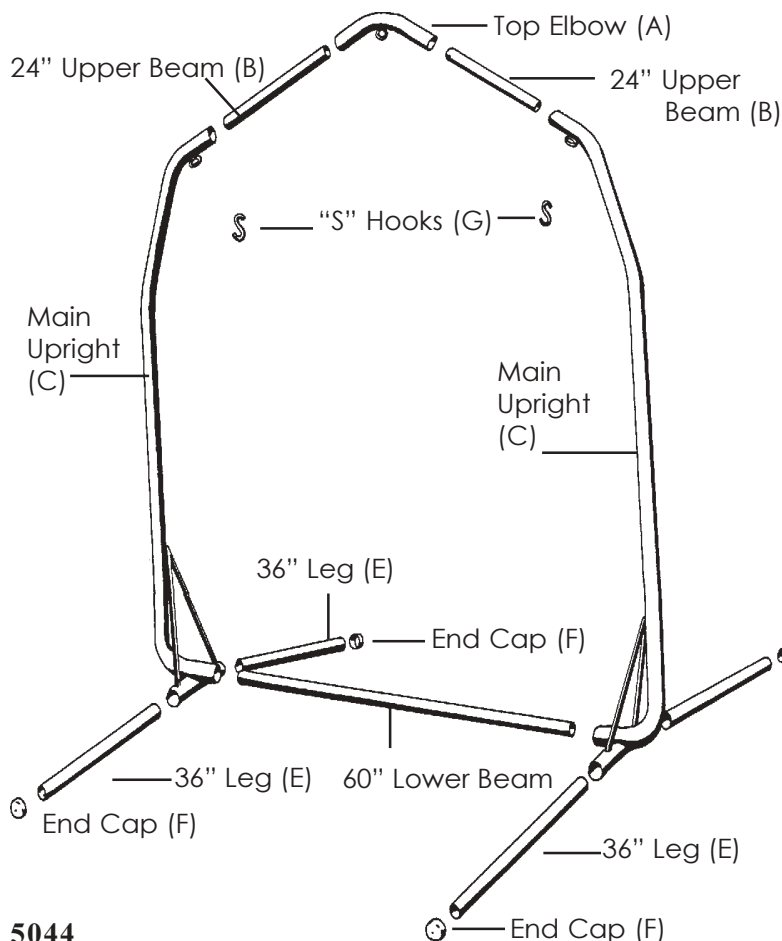


1. Spread your blanket or carpet over the area on which you will be assembling your new swing stand. Lay out the parts for the main frame assembly (parts A, B, C, D) on the blanket or carpet in a configuration resembling the final assembly.




2. Begin assembling by connecting the top elbow (part A) to the two upper beams (parts B). Next, insert the opposite ends of the upper beams into the top of each of the main uprights (part C). See Figure at left.

 3. Place the swing stand on its side and insert the bottom connecting beam into the bottom of the main support lying on the ground. Make the final connection of the ring by connecting the bottom of the upright that is now in the air with the lower beam. You will need to stand on the inside and pull in on the lower beam until it is directly in line with the upright that is in the air. Once aligned, insert the lower beam into the opening in the upright and pull down on the upright.

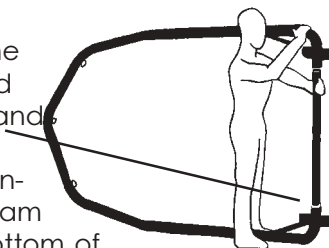

Steel Swing Stand

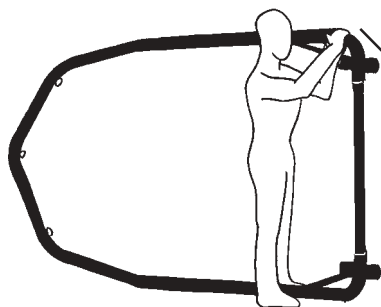 

To make sure the lower beam is completely in the main upright, grab the upright and lift it into the air and bring down forcefully onto a protected surface. The lower beam will enter the upright fully at this time.

 
4. Put a rubber end cap (Part F) on each leg (part E). Place the stand upright. Insert the uncapped ends of the legs into the openings at the bottom of each of the main uprights (parts C).



Make sure all other joints are properly connected by pulling downwards on the top section of the stand.



5. If you plan to hang a Single Swing, hook one of the S-hooks (part G) into the center swing mounting loop attached to the top elbow and attach the swing chain to this hook.

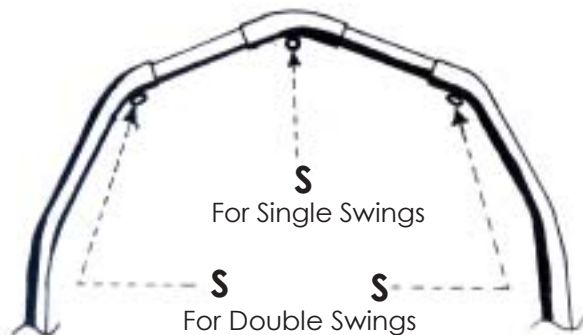

If you will be mounting a Double Swing, hook one S-hook through each mounting loop attached to the main uprights and attach the swing chains to these hooks.

WARNING: Before use, be certain that all joints are firmly connected. This inspection also should be performed after your stand has been moved or reassembled.

CARE AND MAINTENANCE:

- * You may want to disassemble your stand for more convenient storage during the cooler part of the year.
- * To clean your stand, simply wipe it off with a soft, damp cloth; then dry it off immediately using a clean, dry, soft towel.
- * If the finish on our stand gets scratched, it can be touched up easily with automotive touch-up paint, available at most auto parts stores and many department stores.
- * Your stand has been finished with a long-lasting out-door-grade finish. To prolong the life of your stand even further, you can wax it every 3-6 months with automotive wax in the same manner that you would wax your car.
- * Depending on your geographical location, your stand eventually may need to be repainted. To do so, first, prepare the surface of the finish by sanding it with a very fine grit sandpaper. Then, wipe it off with a soft cloth and paint the stand with a high quality outdoor-grade enamel paint, available at most hardware stores.

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials. If this unit is found, within its first 90 days, to be defective, it will be replaced without charge upon the return of the unit. A Return Authorization is needed for return.

If you have any questions about your new Steel Swing Stand, please contact us at:

The HammockSource - Post Office Box 1602, Greenville, North Carolina 27835

Consumer Customer Service: 800.643.3522

**5044
11/AO/OA
p. 2**